
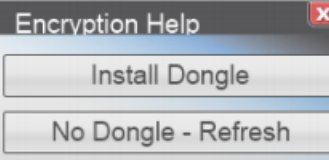


Encryption Dongle Setup Instructions

Note: Do not put the Dongle in the PC Until the very end of this install.


1. Turn on the Computer
2. Go to the DESKTOP
3. Start Program "Mach-3 or Nav or PV
4. Click **HELP** on the Top Toolbar
5. Click **ENCRYPTION**
6. Click **Install Dongle**

FILE EDIT VIEW LIBRARY SETTINGS HELP

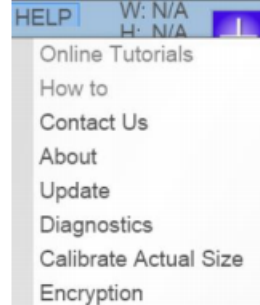



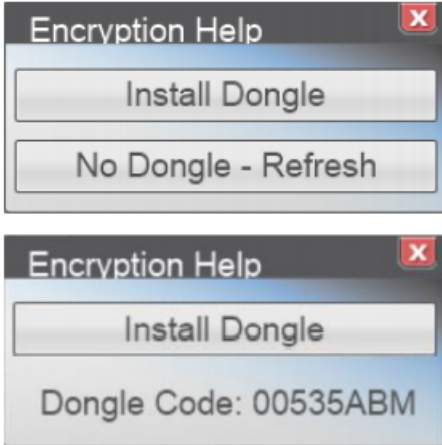
7. **Depending on your software and PC,** The KEYLOK Security Key Installation Window may show up. If it shows up check the box next to KEYLOK 2 (USB w/DRIVER) and make sure the button is also checked on Standalone.
8. Click **Begin Install**

If it is not showing up just go to the next line down #9 of the installation

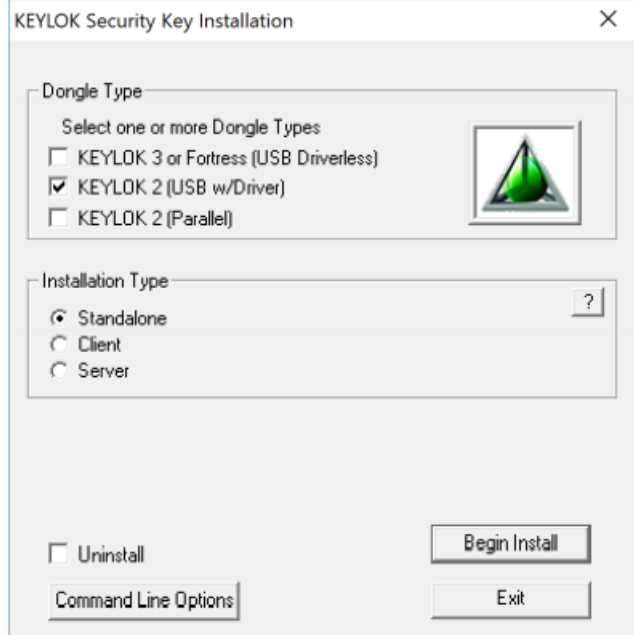

9. The Installation Wizard will show up
10. Click **Next**

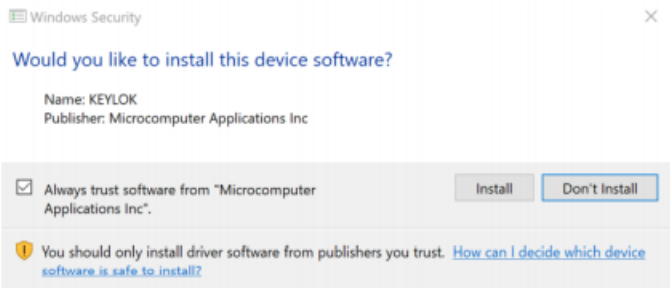

<p>11. Make sure that Always trust software from Microcomputer Applications Inc is Checked.</p> <p>12. Click Install</p>	 <p>Windows Security</p> <p>Would you like to install this device software?</p> <p>Name: KEYLOK Publisher: Microcomputer Applications Inc</p> <p><input checked="" type="checkbox"/> Always trust software from "Microcomputer Applications Inc". Install Don't Install</p> <p>! You should only install driver software from publishers you trust. How can I decide which device software is safe to install?</p>				
<p>13. Click Finish</p>	 <p>Device Driver Installation Wizard</p> <p>Completing the Device Driver Installation Wizard</p> <p>The drivers were successfully installed on this computer. You can now connect your device to this computer. If your device came with instructions, please read them first.</p> <table border="1"> <thead> <tr> <th>Driver Name</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>✓ KEYLOK (usbkey) USB ...</td> <td>Ready to use</td> </tr> </tbody> </table> <p>< Back Finish Cancel</p>	Driver Name	Status	✓ KEYLOK (usbkey) USB ...	Ready to use
Driver Name	Status				
✓ KEYLOK (usbkey) USB ...	Ready to use				
<p>14. Install the green Encryption Dongle into an available USB port on your PC. Note: Find a USB port that is out of the way ~ Mach-3 put in the back of the PC ~ Navigator or PantoVision on the top. It's best not to move the dongle once you have connected it to a port.</p> <p>15. Then Click No Dongle – Refresh</p> <p>16. You should have your Dongle Code</p> <p>17. That's it All Installed & Ready to go</p>	 <p>Encryption Help</p> <p>Install Dongle</p> <p>No Dongle - Refresh</p> <hr/> <p>Encryption Help</p> <p>Install Dongle</p> <p>Dongle Code: 00535ABM</p>				